




LUMIPRINT

LUMINESCENT EFFECT

- Application Guide -
Technique: Sponge

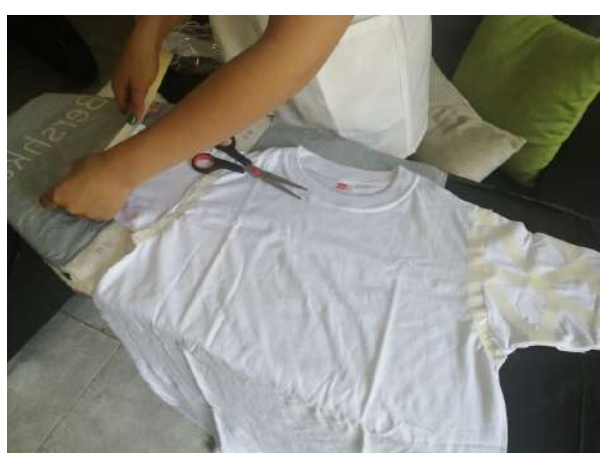

2. COLORS PREPARATION

- Prepare the colors by mixing the Phosphorescent Plastiflex Ref. 5418 (approx. 1/2 tablespoon) with a few drops of Tintuprint Series 56 in neon colors.

PREPARE AS MANY COLORS YOU WANT YOUR DESIGN TO HAVE!



4. GARMENT DRYING & FIXING

- Dry the paint with a hair dryer or allow it to dry completely in the room.
- Once dry, iron the design for better fixation. We recommend covering with a sheet of bond paper and ironing on top of it.

To wash your garment after using it, we recommend using a gentle (or automatic) cycle in a domestic washing machine.



1. GARMENT PREPARATION (DESIGN)

- For this application we will make a geometric design.
- With the help of adhesive tape, delimit the areas on which you want to apply. We recommend covering the collar and edge of the sleeves.



3. GARMENT APPLY

- Take the colors prepared using a sponge, and apply it on the garment by tapping carefully. Be careful not to go out of bounds with the tape.

We recommend not using the same color in continuous areas, so you will achieve a better harmony in your design.



5. SHOW YOUR DESIGN

- Now your garment is ready to wear.
- With this kit you will have three different effects that will depend on the light you are under: natural light, UV light and in the dark.

